


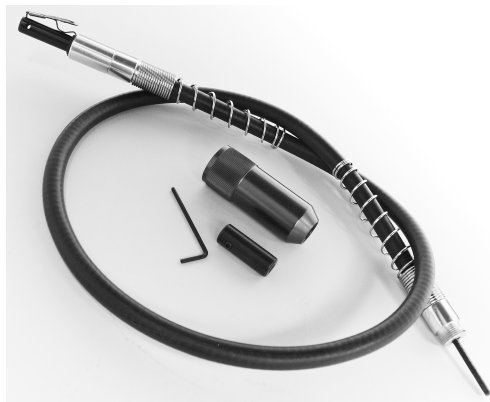

Slip Joint Adapter Instructions


FOREDOM®

Foredom Electric Company


16 Stony Hill Road

Bethel, CT 06801 USA


www.foredom.net

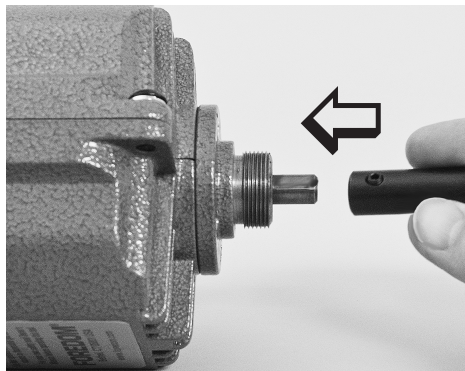

1. Place shaft adapter on motor hub. Align set screw with flat side of motor hub and tighten with hex key.

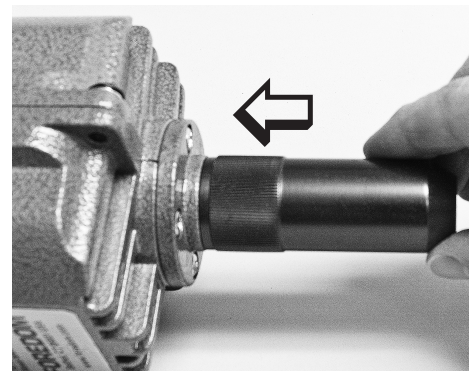

2. Screw motor connector onto motor. Motor connector has a left hand thread and must be turned counterclockwise (left) to tighten.

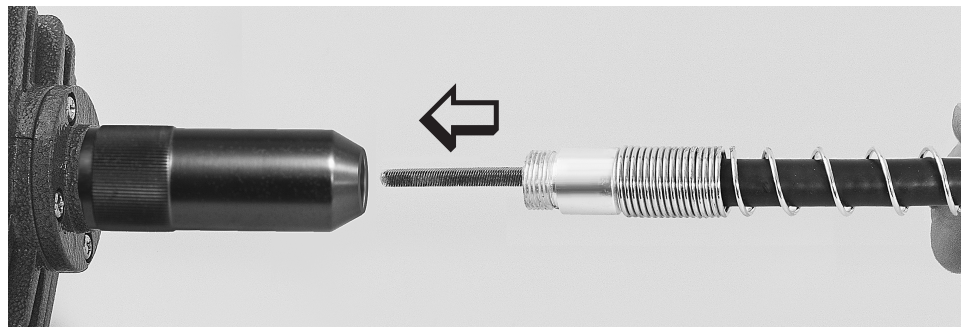

3. Lightly grease tip of flexible shaft. Align the square end of shaft with the square hole in the shaft adapter. Finally, screw the outer sheath into the motor connector.